

# ThermoPop<sup>®</sup> Thermometer

## with 360° rotating display

- fast response probe, five to six second readings
- backlit display & auto-power off function

The new ThermoPop is a pocket-sized, waterproof (IP66) thermometer which incorporates a fast response Ø3 x 114 mm stainless steel penetration probe with reduced tip.

The unit incorporates a unique (patent pending) 360° rotating display. Simply push a button to rotate the display in 90° increments, enabling the user to read the temperature in any position ie. left hand, right hand, vertical or horizontal.

The ThermoPop indicates temperature over the range of -50 to 300 °C with a 1 °C/°F resolution. Each unit is supplied with a probe cover with integral pocket clip.



order code	description
810-280	ThermoPop thermometer



specification	ThermoPop
range	-50 to 300 °C
resolution	1 °C/°F
accuracy	±1 °C (-20 to 120 °C)
battery & battery life	3 volt CR2032 - 5000 hours
display	9 mm LCD
dimensions	20 x 45 x 178 mm
weight	30 grams

# Super-Fast Mini Thermometer


## with max/min & hold function

- fast response probe, five to six second readings
- easy to use, pocket-sized thermometer

The Super-Fast Mini is a pocket-sized, water resistant (IP65) thermometer that measures temperature over the range of -39.9 to 149.9 °C with a 0.1 °C/°F resolution.

The thermometer incorporates a fast response Ø2.5 x 73 mm stainless steel penetration probe with reduced tip and features a max/min and hold function.

Each unit is powered by a CR2032 lithium coin cell battery and supplied with a probe cover with integral pocket clip.

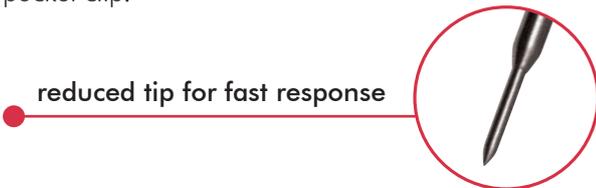

● reduced tip for fast response

order code	description
810-279	Super-Fast Mini thermometer



specification	Super-Fast Mini
range	-39.9 to 149.9 °C
resolution	0.1 °C/°F
accuracy	±0.5 °C (-10 to 100 °C)
battery & battery life	3 volt CR2032 - 5000 hours
display	8 mm LCD
dimensions	Ø25 x 150 mm
weight	20 grams

