

# Saf-T-Log<sup>®</sup> Thermometer

## paperless temperature recording

- displays date, time & user name with each reading
- automatically archives data & creates reports
- PASS/FAIL & corrective actions displayed
- holds up to 7 checklists

Measure, store, download and print HACCP reports. No more paper logs or complicated PDA's to train staff how to use! The Saf-T-Log is as easy to use as your current thermometer.


The Saf-T-Log includes Windows<sup>®</sup> software to create a list of up to 300 items that you routinely measure, 10 corrective actions, along with up to 25 users. Each item can include a high/low temperature limit that gives the user instant on-screen pass/fail feedback or yes/no on non-temperature items. A time delay feature can be added to each temperature item. Up to seven different checklists can be created at any one time, to be saved, emailed to other users and uploaded onto any Saf-T-Log.

Record up to 1000 readings by simply scrolling to the correct item and pressing record. Any 'fail' or 'no answer' can prompt the selection of a corrective action. Once readings are taken they can be uploaded to a PC automatically when reconnected. The data is archived and a report generated automatically with no additional user input. The Saf-T-Log report is locked so the data logged cannot be tampered with.

Housed in a durable, IP66/67 waterproof case with a choice of interchangeable type K thermocouple probes, the Saf-T-Log can be used for a wide variety of applications. The thermometer includes a high contrast backlit display with an accuracy of  $\pm 0.4$  °C and a calibration trim function.


### USB Connection Point

The Saf-T-Log incorporates a USB port which allows the user to connect to a PC.

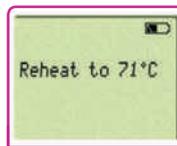

• Corrective Action

*"The Saf-T-Log is a total innovation from ETI. No other recording handheld system records data this intuitively at anywhere near the price"*



specification	Saf-T-Log
range	-100 to 1372 °C
resolution	0.1 °C
accuracy	$\pm 0.4$ °C $\pm 0.1$ % of reading
battery	3 x 1.5 volt AAA
battery life	>2500 hours (without backlight)
sensor type	type K thermocouple
display	12 mm LCD
dimensions	32 x 71 x 141 mm
weight	220 grams
<i>FREE traceable certificate of calibration included</i>	

order code	description
292-701	Saf-T-Log
830-231	protective silicone boot - white
<i>the Saf-T-Log is exclusive of probe</i>	