

# ThermaLite<sup>®</sup> Thermometers

with assured accuracy for life



- temperature range -39.9 to 149.9 °C, with a high accuracy
- reduced tip provides faster & more accurate readings
- ThermaLite 2 includes CalCheck 0.0 °C function
- FREE traceable certificate of calibration

The ThermaLite digital thermometers display temperature over the range of -39.9 to 149.9 °C with a 0.1 °C resolution and an accuracy of ±0.5 °C (-39.9 to 124.9 °C). This accuracy is guaranteed for life, due to the instruments advanced electronics. The ThermaLite 2 also incorporates CalCheck and hold functions.




The thermometers weigh only 45 grams including battery, and feature a clear, easy to read LCD display with an open circuit 'Err' and low battery indication. The ThermaLite's auto-power off facility turns the instrument off automatically after ten minutes, maximising battery life. The thermometer is housed in a high impact ABS plastic case which includes the 'Biomaster' additive that reduces bacterial growth, ideal for routine day-to-day food and catering applications.

The Ø3.3 x 80 mm reduced tip, stainless steel, penetration probe is ideal for measuring the temperature of food and semi-solid materials. The ThermaLite is available in six colours, suitable for different applications.

## ThermaLite 2 with CalCheck function

The ThermaLite 2 features a CalCheck 0.0 °C (±0.1 °C) function that allows the user to verify the accuracy of the thermometer at any time, giving confidence that measurements are accurate.

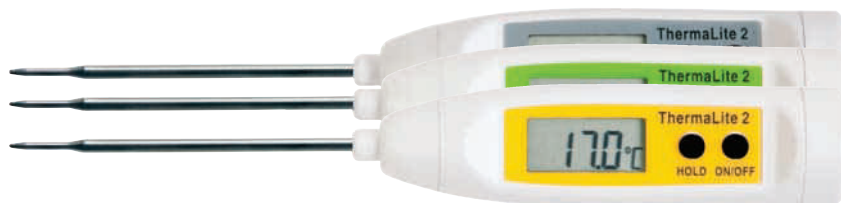

## Protective Silicone Boot

protects your instrument against accidental damage and increases the water resistance to an IP65 rating

order code	description
226-101	ThermaLite 1 - grey
226-111	ThermaLite 1 - white
226-121	ThermaLite 1 - yellow
226-131	ThermaLite 1 - green
226-141	ThermaLite 1 - red
226-151	ThermaLite 1 - blue
226-102	ThermaLite 2 - grey
226-112	ThermaLite 2 - white
226-122	ThermaLite 2 - yellow
226-132	ThermaLite 2 - green
226-142	ThermaLite 2 - red
226-152	ThermaLite 2 - blue
830-280	protective silicone boot



specification	ThermaLite 1 & 2
range	-39.9 to 149.9 °C
resolution	0.1 °C/°F
accuracy	±0.5 °C (-39.9 to 124.9 °C)
battery	3 volt CR2032 lithium coin cell
battery life	5000 hours
sensor type	thermistor
display	10 mm LCD
dimensions	Ø29 x 196 mm (inc. probe)
weight	45 grams

*FREE traceable certificate of calibration included*