


PROFESSIONAL CONDENSATION DEHUMIDIFIERS

DH 26-DH 44-DH 62-DH 92



DH 26

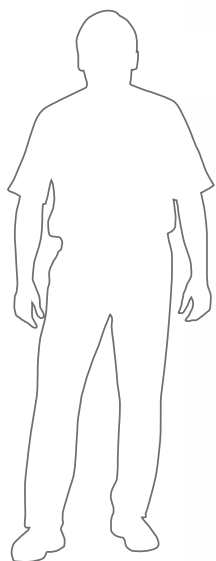

**DH 44
DH 62
DH 92**



- Long-lasting steel casing
- High efficiency
- Hour counter
- Large water tank with automatic shut-off when full
- Possibility to connect a hose to remove condensed water
- Tank full indicator
- Air filter
- Automatic fast defrosting by hot gases
- Restarts automatically after a power failure
- Large wheels and handle
- Built-in hygostat


Optional accessories



Water pump
Forcing height 4m
4512.441



Wide spaces
between
evaporator tubes
prevent clogging

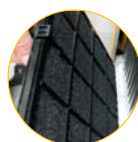

Compact foam
air filter enables
work in very
dusty spaces



Digital control
panel

Specifications	Units	DH 26	DH 44	DH 62	DH 92
Capacity (30°C/80% RH)	l/24h	28	41	52	80
Capacity (20°C/60% RH)	l/24h	12	17	20	32
For rooms of approx.	m ³	405	615	780	1200
For restoration after flooding	m ³	162	246	312	480
Air flow	m ³ /h	350	480	480	1,000
Operating temperature range	°C	1-42	1-42	1-42	1-42
Operating humidity range	%	30-70	30-70	30-70	30-70
Refrigerant		R1234YF	R1234YF	R1234YF	R1234YF
Power consumption	W	520	610	860	1.200
Power supply	V/Hz	220-240/1ph/50	220-240/1ph/50	220-240/1ph/50	220-240/1ph/50
Sound level	dB(A)	46	53	53	50
Tank capacity	l	8	12	12	12
Product size (l x w x h)	mm	450 x 470 x 890	600 x 580 x 850	600 x 580 x 850	580 x 600 x 1035
Box size (l x w x h)	mm	430 x 400 x 730	590 x 580 x 830	590 x 580 x 850	590 x 580 x 1020
Net/gross weight	kg	30/33	43/47	47/51	66/70
Pallet	pcs	8	4	4	2
Dual voltage		No	Available	Available	No